

Installation Instructions

Elevate[®] Adjustable Containment End of Row Exhaust Duct Panel



WARNING: Improper use of this product may lead to serious injury or death. Read and understand all instructions for proper installation and use of this product.



WARNING: The End of Row Adjustable Duct Panels must be securely fastened to Adjustable Containment Panels.




Warning: Installation of aisle Containment products may require the use of ladder, Scaffolds, and other climbing tools. Follow all climbing device procedures and observe all safety and warning precautions.

Intended Use

Install this assembly only in a restricted service environment, such as a data center. Use indoors only, in environmentally controlled areas; do not use outdoors, in harsh environments or in air-handling spaces or in direct proximity to unshielded high voltage.

The 14520-XXX End of Row Adjustable Duct Panel is intended to be used in conjunction with 14500-XXX Containment Panels to form an Exhaust Duct above a row of ZetaFrame Cabinets.

This instruction is to be used as a general guideline as the actual field installation will depend on system containment requirements.

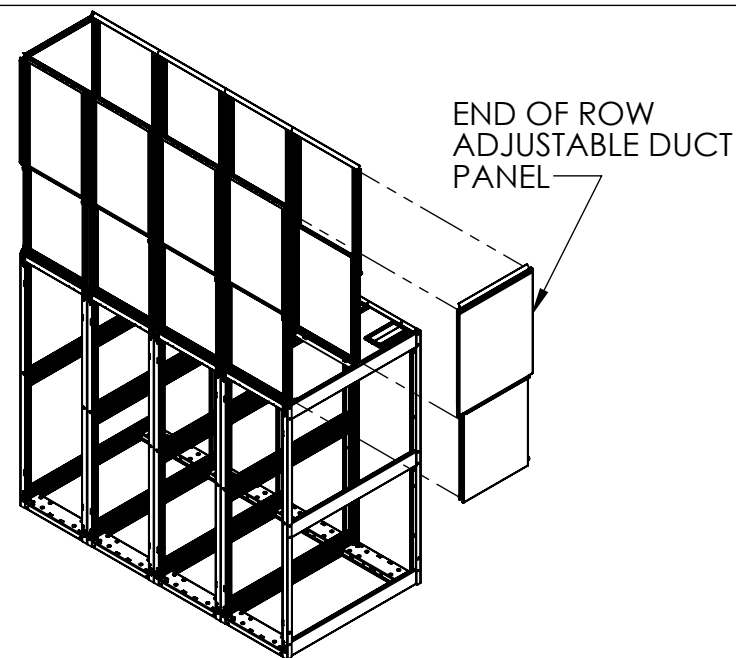

Required Tools:

- 13mm Socket wrench
- Utility knife

Included Hardware:




QTY(10) M8x12 Serrated Flange Screw

Installation Instructions


Elevate® Adjustable Containment End of Row Exhaust Duct Panel

INSTALLATION INSTRUCTIONS:

1. Attach the lower panel (with 6 slots) to the containment extrusion channels using 6 of the provided M8x12 serrated screws as shown in Figure 2.

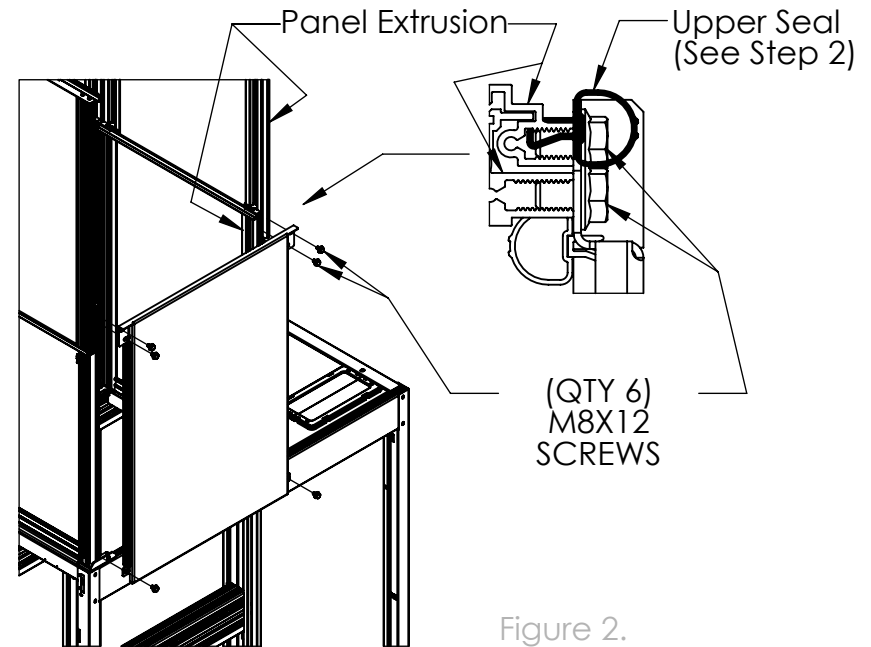

2. Measure Dimension A from top of lower panel to the lower edge of the upper cabinet panel flange as shown in Figure 3. Cut Qty(2) bulb seals 1in [25mm] shorter than Dimension A. Install Seal as shown.

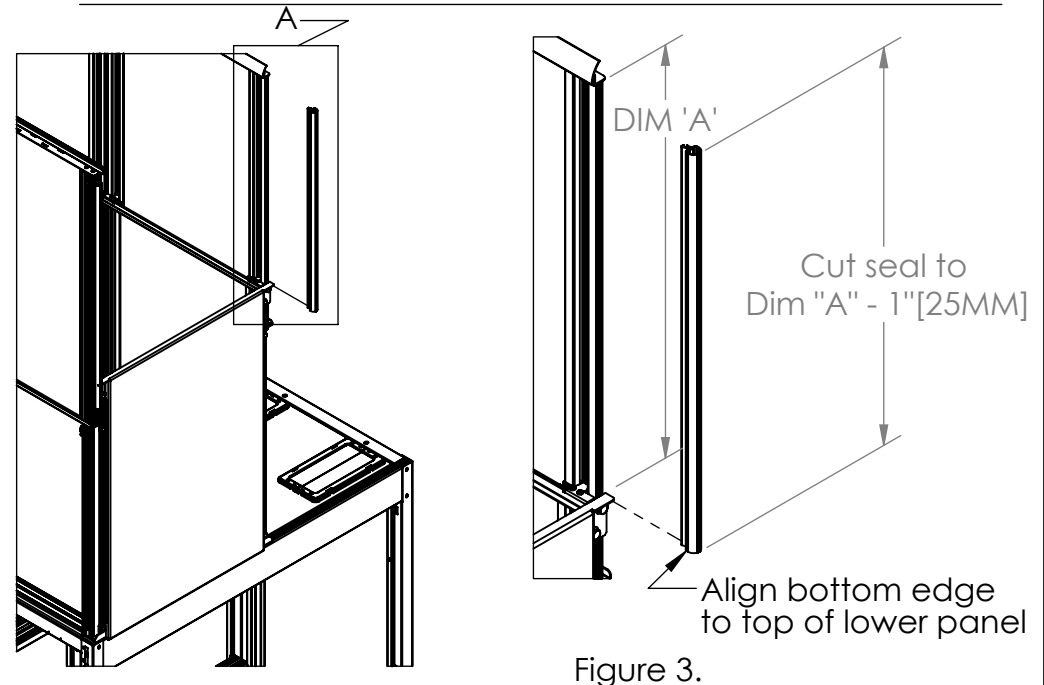

Installation Instructions

Elevate[®] Adjustable Containment End of Row Exhaust Duct Panel

INSTALLATION INSTRUCTIONS:

4. Attach the upper panel (4 Slots) to the containment panels as shown in Figure 4 with the remaining 4 M8x12 serrated screws.
5. If required, push upper rubber edge seal upwards to close any small air gaps.

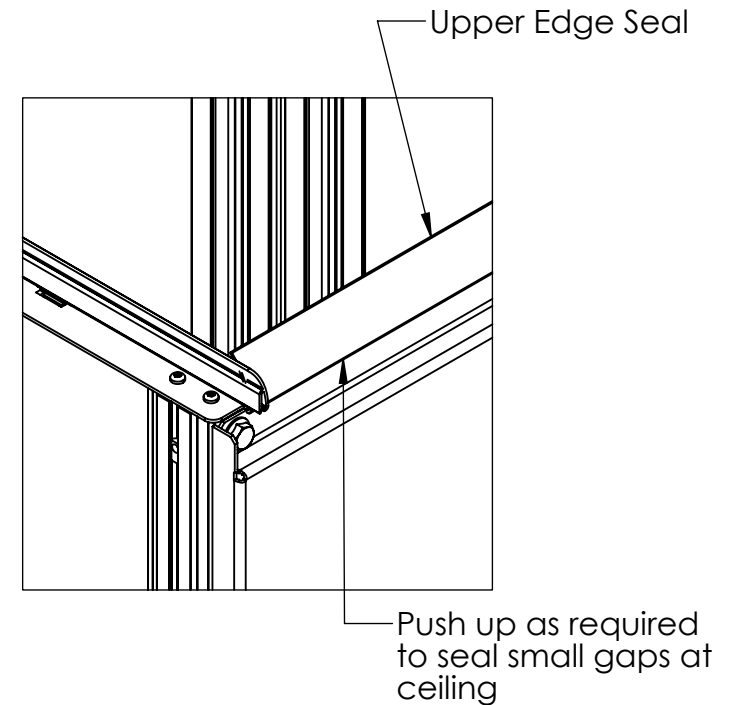
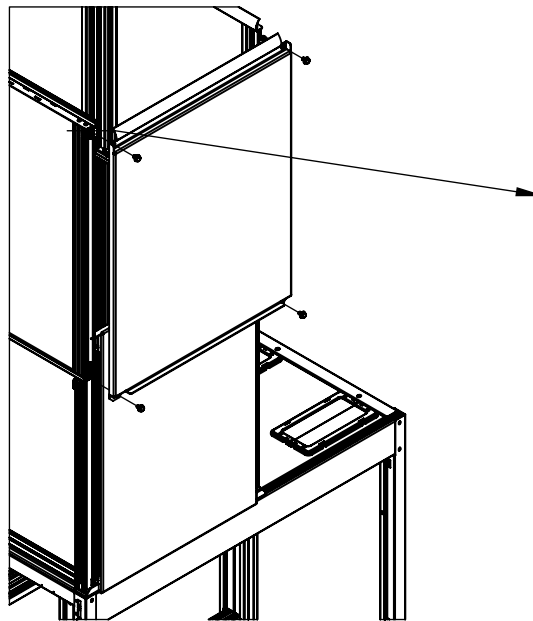


Figure 4.