

Installation Instructions

VELOCITY CABLE RING KIT

Intended Use

The Cable Ring Kit provides a vertical cable path in the rear of Single Sided Vertical Cable Managers.

Tools Required


8mm Wrench

Included Parts

Set of Cable Rings
(Kit of 6, 7 or 8)

16 each
M5 X 12mm Bolts


16 each
M5 Flange Nuts

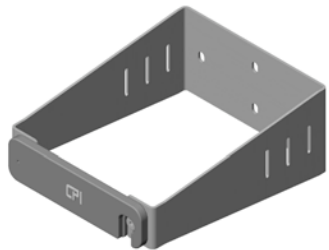

Installation

The cable rings mount to the rear of a single sided Velocity cable manager using M5 hex bolts and two M5 nuts per cable ring.

- 1.) Slide M5 bolts into cable ring mounting slots.
- 2.) Mount cable ring onto exposed bolt thread and fasten with M5 flange nut.
- 3.) Ensure that cable ring is centered on cable manger and tighten nuts one half turn past finger tight.

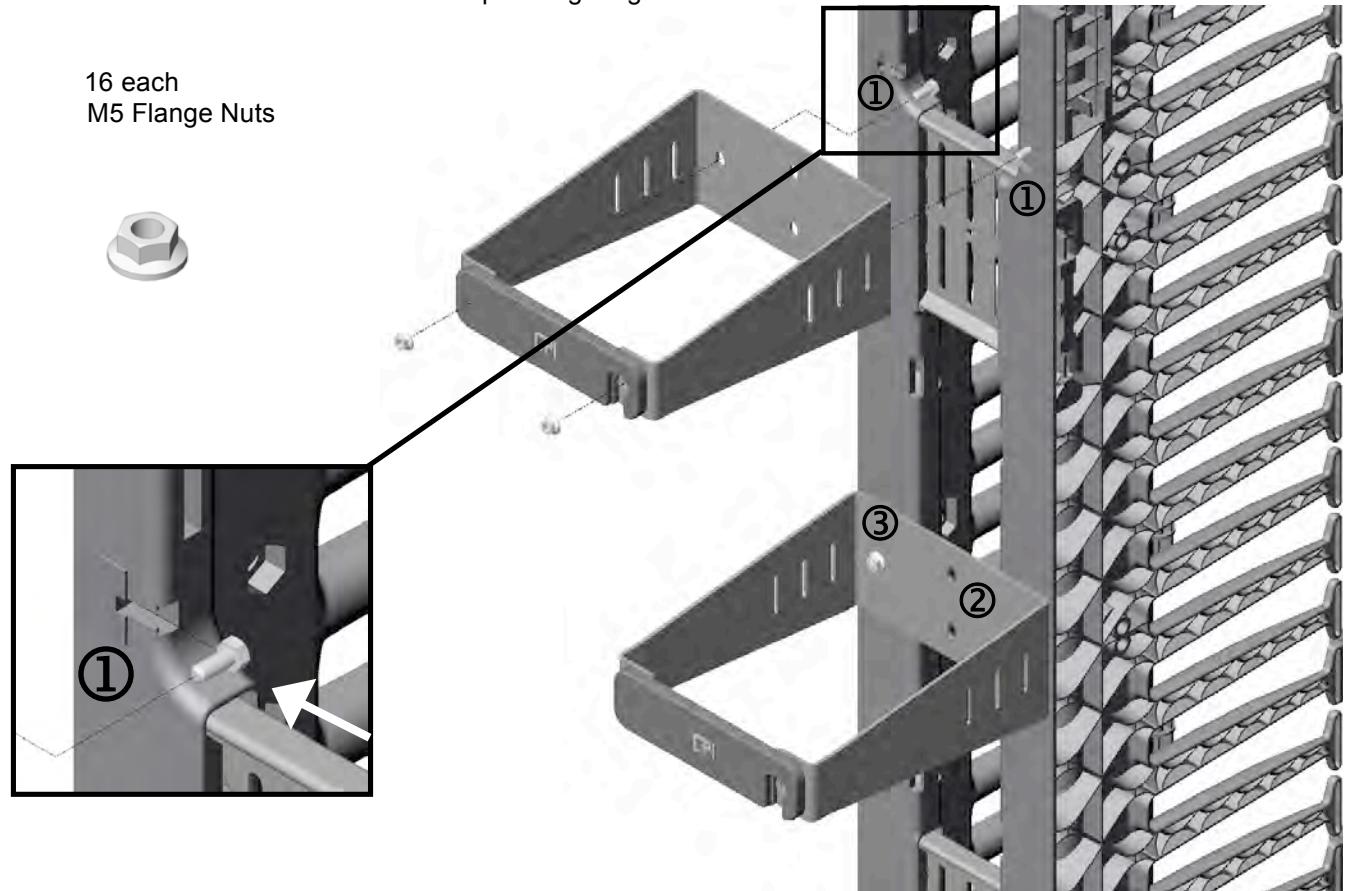

CHATSWORTH PRODUCTS, INC.

IIS-713934, 12/14/09, Rev. 1, CPI/J Young


800-834-4969 • techsupport@chatsworth.com • www.chatsworth.com

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.

Installation Instructions

VELOCITY CABLE RING KIT

**15008-001
Spool Kit**

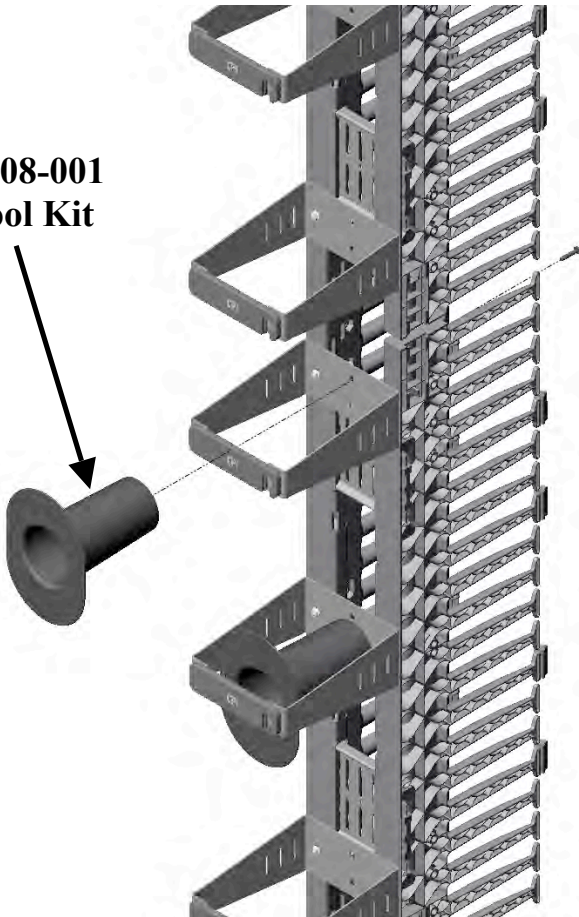

Optional Cable Spool Kits

There are two cable spool kits available:

- Kit 13935-701 is a smaller 2" diameter spool that can be used on 6" or wider cable ring kits. See instructions provided with kit for installation.
 - Kit 15008-001 is a larger spool that can be used on 10" and wider cable ring kits.
1. To mount a spool on the cable ring, use the one of the center holes in the bracket as shown for the top spool below.
 2. Tighten screw tight enough to prevent any rotation of the cable spool, but do not over tighten as this may damage the spool.